 
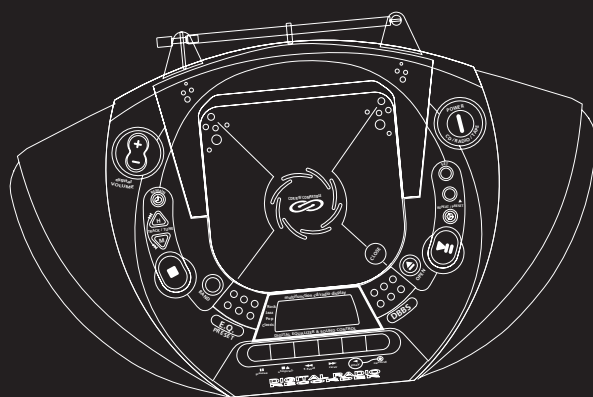 


RCA

THOMSON

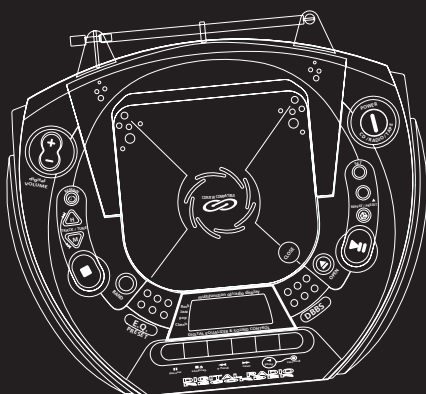

RCD120 / RCD123 / RCD125 TM9138U / TM9139U / TM9238U

It is important to read this instruction book prior to using your new product for the first time.
Es importante leer este manual antes de usar por vez primera su equipo.

Safety Information

EN

Thomson Information

CAUTION!

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

LASER $\lambda = 780\text{nm}$, P max=5 mW

Rating Information : At the bottom of the unit.
This unit complies with the existing requirements.



In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.



Please respect the environment!
Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.



Have a Blast-Just Not in your eardrums
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

ADVARSEL!
USYNLIG LASERSTRÅLING VED ÅBNING NAR
SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION.
UNGDDÅ UDSÆTTELSE FOR STRÅLING.
VORSICHT!
UNSICHTBARE LASERSTRALUNG
WENN ABDECKUNG GEÖFFNET UND SICHERHEITS-
VERRIEGELUNG ÜBERBRÜCKT.
NICHT DEM LASERSTRAHL AUSSETZEN!

CAUTION - INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS FAILED OR
DEFEATED. AVOID EXPOSURE TO BEAM.

ATTENTION - RAYONNEMENT LASER INVISIBLE
DANGEREUX EN CAS D'OUVERTURE ET LORSQUE
LA SECURITE EST NEUTRALISEE.
EXPOSITION DANGEREUSE AU FAISCEAU.



VARNING-
OSYNLIG LASERSTRÅLING NÄR DENNA DEL
ÄR ÖPPNAD OCH SPÄRRAN ÄR URKOPPLADE.
BETRÄKTA EJ STRÅLEN.
VARO!
AVATTAESSA JA SOJUALUKITUS OHITETTAESSA
OLET ALTTIINA NÄKYMÄTTÖMÄLLE.
LASERSÄTEIL YLLE ÄLÄ KA TSO SÄTEESEEN.

CLASS 1 LASER PRODUCT
LASER KLASSE 1
APPAREIL A LASER DE CLASSE 1
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

FOR UNITED KINGDOM VERSION ONLY

CONNECT THE MAIN LEAD INTO A MAINS POWER SOCKET

POWER SUPPLY 230V ~ 50 Hz. It must not be connected to D.C. mains.

Note: The mains lead of the sets is fitted with a moulded plug. If the mains sockets are not compatible or if for any reason the plug is removed please follow the directions below. The moulded plug cannot be rewired and if removed must be disposed of safely.

Do NOT under any circumstances plug the severed plug into any mains socket as this could result in electric shock.

Important: If the plug is removed rewire the new plug as follows:

The wires in the mains plug are coloured in accordance with the following code:

BLUE = NEUTRAL / BROWN = LIVE

 
As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

BLUE wire to the terminal coded N (Neutral) or coloured black.

BROWN wire to the terminal coded L (Live) or coloured red.

Do NOT make any connection to the terminal in the plug which is marked by the letter E or by the earth symbol or coloured green or green and yellow.

A fused plug must be fitted with a 3A fuse approved by ASTA or BSI to BS1362 and fuse covers must be always be securely replaced. If your set does not work, the fuse may be blown.

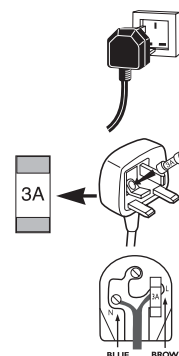

FCC information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

Technical Information

Product:: Portable CD Radio Cassette Recorder with Digital Tuner

Brand: RCA

Model: RCD120 / RCD123 / RCD125

Electrical Consumption

Power Supply: 120V ~ 60Hz

Power Consumption: RCD120 - 19.1 Watts

RCD123 - 15.3 Watts

RCD125 - 15.1 Watts

IMPORTER

Comercializadora Thomson de México,
S.A. de C.V.

Miguel de Cervantes Saavedra 57

 
Col. Ampliación Granada

C.P. 11529 Mexico D.F.

Telefono: (55)25 81 53 20

RFC: CTM-980723-KS5

For Your Safety

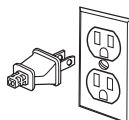

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified

electrician to change the outlet, or use a different one.

Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.



Date of Purchase

Place of Purchase

Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide

 <p>THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

EN

Contents


EN

FCC information / Safety Information	CD Player	6
Before you begin	Tape player	7
General controls	Troubleshooting tips	8
Remote Control	Maintenance	9
Display	More Information	10
Settings	Limited Warranty (For U.S.)	11
Radio	Limited Warranty (For Canada)	13

Before you begin

AC Power

 Plug the power supply cord into the AC power jack on the back of the unit, and into an AC power supply outlet that accepts the plug supplied with your unit.

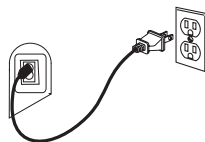


Note: Look in the battery compartment to find the AC power cord.

IMPORTANT: Be sure to remove batteries when storing the set for more than 30 days. Leaky batteries can badly damage the system. Always return tape operation buttons to their off position before storing. This will relieve pressure on certain parts in the tape recorder that might deform after long periods of time. Be sure to dispose of leaky, weak or dead batteries properly according to federal, state, and local regulations. To prevent injury or damage, do not reverse batteries and do not mix battery type.

Battery Power

 You can insert 6 D-sized alkaline batteries (not supplied) and you can take your stereo just about anywhere. 3 "AA" batteries (not supplied) are needed to keep radio station memory. Open the battery compartment door on the back of the unit by pressing down on the arrow and pulling out the cover. Insert batteries in the battery compartment.(See diagram)

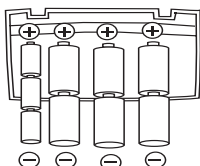


Note that the AC line cord must be unplugged from the jack on the back of the unit to operate on batteries.


General controls

Main Unit

 EN

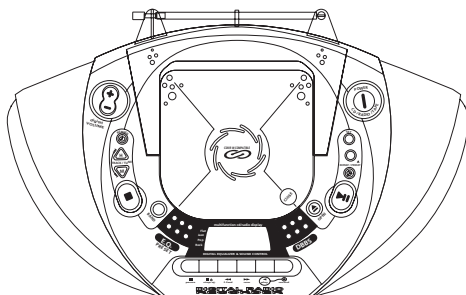

RCD123 / RCD125 / TM9138U / TM9139U

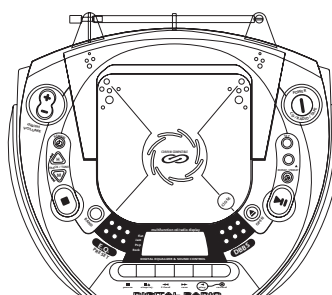 

RCD120 / TM9238U

POWER / CD / RADIO / TAPE – turns the unit on/off; selects among radio, tape and CD mode.

DIGITAL VOLUME — increases or decreases output volume.

REMAIN / – selects between displaying track elapse time and CD remain time during CD playback; displays clock time, date and timer on/off time in CD or radio mode

TRACK / TUNE (H / M) – In CD mode - searches / skips to the next track or back to the previous track; In tuner mode - tunes up or down radio frequency; In clock and date setting mode - move forward or backward when setting time and date.

SET – In CD mode - enters program mode; In tuner mode - sets radio preset channels; enters clock and date setting mode.

REPEAT/PRESET UP – In CD mode - selects repeat options (repeats 1 track / repeat disc); In tuner mode - accesses preset radio channels.

SHUFFLE / MIX (for Thomson models) – plays CD tracks randomly.

DBBS – turns on/ off digital bass boost system.

E.Q. PRESET - selects among sound effects (Flat / Jazz / Pop / Rock / Classic).

BAND – selects between AM and FM band (or MW/LW/FM for Thomson model).

 
OPEN – opens the CD compartment door.

PLAY / PAUSE – starts or pauses CD play.

STOP – stops CD playback.

CLOSE – push to close the disc compartment door.

Cassette Player



PAUSE – pauses tape playback or recording

STOP/ EJECT – stops tape playback, winding or recording, opens cassette door

F. FWD/ REW – winds tape forward or backward

PLAY – starts tape playback

REC – starts tape recording

Remote Control

EN

For RCD125 / TM9139U / TM9238U Only

SOURCE - selects radio, tape or CD mode.

REPEAT/PRESET UP - In CD mode - selects repeat options (repeats 1 track / repeat disc); In tuner mode - accesses preset radio channels.

DBBS - turns on/ off digital bass boost system.

E.Q. - selects among sound effects (Flat / Jazz / Pop / Rock / Classic).

BAND - selects between bands.

SHUFFLE/MIX - plays CD tracks randomly.

 
SET - enters program or setting mode for clock, CD & tuner mode.

TRACK TUNE - searches/ skips CD track backward or forward, selects radio frequency and sets clock.

PLAY / PAUSE - starts or pauses CD play.


STOP - stops CD playback.

VOLUME + / - - adjusts volume.

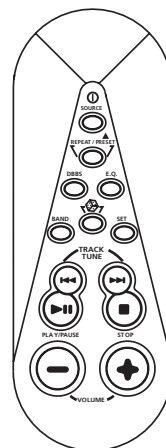

Operated by 2 "AAA" batteries (not supplied)

 Display

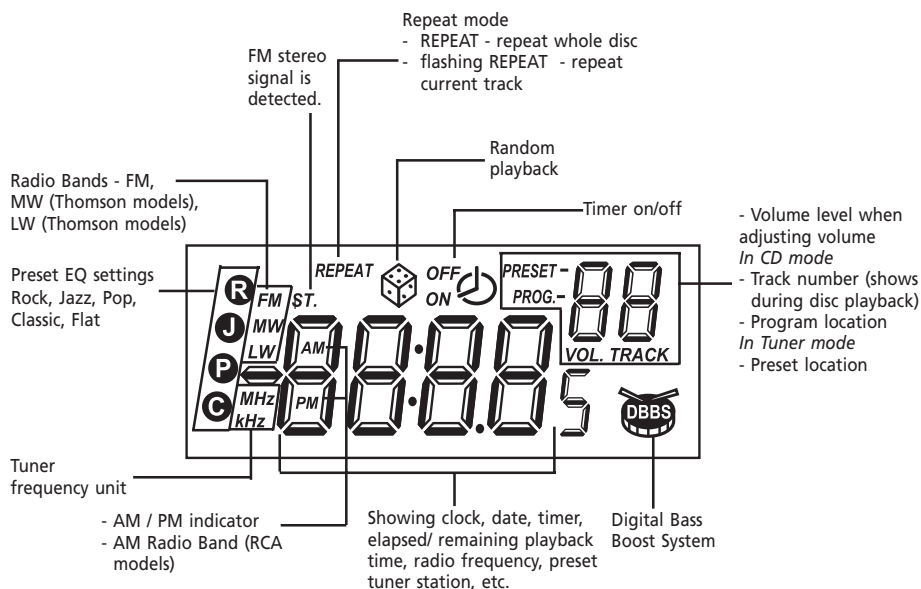


Settings

EN





Setting Clock

1. Press **SET** when clock time is shown on display.

Tips:

Press **REMAIN/**  to show clock in CD, Radio and Tape mode.



The Hour digits flash.

2. Press **TRACK/TUNE**  or  to set the hour.
3. Press **SET** to shift to minute digits.
4. Press **TRACK/TUNE**  or  to set the minute.
5. Press **SET** to confirm settings.


NOTE:

RCA models - Clock in 12 (AM/PM) hour format.



Thomson models - Clock in 24 hour format.

2. Press **SET** to begin setting the Timer On time. The hour flashes.
3. Press **TRACK/TUNE**  or  to set the hours.
4. Repeat steps 2 and 3 to set the minutes and source. (CA - Tape / cd - CD player / tu - Radio)
5. Press **SET** to confirm settings.

Setting Timer Off

 
1. Press **REMAIN/**  repeatedly until the Timer Off setting shows on the display.





2. Press **SET** to begin setting the Timer Off time. The hour flashes.
3. Press **TRACK/TUNE**  or  to set the hours.
4. Repeat steps 2 and 3 to set the minutes.
5. Press **SET** to confirm settings.


 
Setting the Date

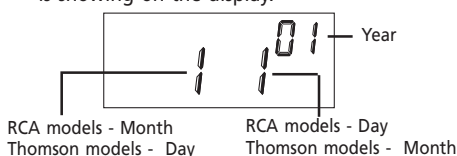1. Press **REMAIN/**  repeatedly until the date is showing on the display.



2. Press **SET**. The year digits flash.
3. Press **TRACK/TUNE**  or  to set the year.
4. Repeat steps 2 and 3 to set the month and day.
5. Press **SET** to confirm settings.

Activating the Timer

1. Press and hold **REMAIN/**  to turn on or off the timer. The clock icon  will show on the display when the timer is on.

Volume Control





Press **DIGITAL VOLUME + / -** to adjust volume.

Boosting Bass

Press any one of the **DBBS** buttons. Press again for de-selection.

Preset Equalizer Curves



Press any of the E.Q. preset buttons to toggle among the different sound effects.

- Flat
- Rock 
- Jazz 
- Pop 
- Classic 



Radio

EN

Tuning to a station

1. Press **POWER/CD/RADIO/TAPE** to select radio mode.
2. Press **BAND** to select between AM and FM band (MW/LW/FM for Thomson model).
3. Press **TRACK/TUNE**  or  to select radio station.

Tips:



Press and hold **TRACK/TUNE**  or  for more than 1 second to automatically tune to the next station.

4. Press **DIGITAL VOLUME + / -** to adjust a your desired listening level

Tips:

Extend or reposition the antenna for better FM reception. Move the unit for better AM (MW/LW for Thomson model reception).



Setting presets manually

1. Press **BAND** to select between AM/FM(RCA) or MW/LW/FM (Thomson bands).
2. Press **TRACK/TUNE**  or  to access the desired frequency.
3. Press **SET**.
4. Press **REPEAT/PRESET** repeatedly to assign program number.
5. Press **SET** to confirm.
6. Repeat steps 2 to 5 to preset to a maximum of 10 channels for FM & AM (MW) band, and 5 channels for LW (Thomson model only)

Auto preset

 
Press and hold **BAND** to set presets automatically. The display will show AUTO.

Once a station is found, the search stops briefly to allow you to listen to the station.

- Press **TRACK/TUNE**  or  at this time if you decide not to store selected station.
- If you decide to store the station in preset memory, wait a few seconds and the search will resume.

Using presets

1. Press **BAND** to select between bands.
2. Press **REPEAT/PRESET** to enter preset mode and PRESET 1 shows.
3. Press **REPEAT/PRESET** repeatedly to access your desired preset stations.










CD player

EN

Playing disc

This unit is compatible with audio CD-R/CD-RW discs.

1. Press **POWER/CD/RADIO/TAPE** to enter CD mode.
2. Press **OPEN**  to open disc compartment door.
3. Insert a disc with label face up.
4. Push **CLOSE** to close disc compartment door. Total number of tracks on disc will show on the display.
5. Press **PLAY/PAUSE** to begin CD playback.
6. Press **TRACK/TUNE**  or  to skip to the next or previous track.
7. Press and hold **TRACK/TUNE**  or  for quick search of the current track.
8. Press **DIGITAL VOLUME** to adjust to the desired listening level.
9. Press **PLAY/PAUSE**  to pause playback. Press again to resume. Press **STOP**  to end disc playback.

Tips:

You may listen through headphones by inserting one pair into **PHONES** jack.




Repeating

Press **REPEAT/PRESET** once to repeat entire disc and [REPEAT] icon shows on display.

Press **REPEAT/PRESET** twice to repeat current track and a flashing [REPEAT] icon shows on display.

Press **REPEAT/PRESET** a third time to turn off repeat mode.

Remain/Clock




Press **REMAIN/CLOCK**  to select between displaying Track time elapse / track time remain.

Random Playback

Press **SHUFFLE / Mix**  to play tracks randomly and a dice icon  appears on display. Press again for de-selection.

Programming


When player is in stop mode,

1. Press **SET** with **PROG.** and **TRACK**(flashing, indicating program position) shows on display.
2. Press **TRACK/TUNE**  or  to select the track you want to store in the program.
3. Press **SET** again to confirm your selection.
4. Repeat steps 2 to 3 to program to a maximum of 20 tracks.
5. Press **PLAY/PAUSE**  in program mode to start program playback (**PROG.** appears on display).

Tip:

If you are in normal playback mode but want to play the saved program. Press **STOP**, then **SET** and then **PLAY**.

Clearing program list

Your program will be erased once you open the disc compartment door, change to another source mode (e.g. radio, tape) or press **STOP**  in program mode.

Displaying the program list

1. While the CD player is stopped, press **SET** to enter program mode.
2. Press **SET** repeatedly to review the program list.

Tape player

EN

Playing a tape

1. Press **POWER/CD/RADIO/TAPE** until TAPE mode is selected.
2. Press **STOP/EJ.** to open the tape deck door.
3. Insert a tape into the door and push the door closed.
4. Press **REW** or **F.FWD.** to wind the tape to the desired starting position. Press **STOP/EJ.** to stop winding.
5. Press **PLAY** to start playback.
Press **PAUSE** to pause playback (press again to release the button to resume playback).
Press **STOP/EJ.** to stop playback.

Recording to tape

From radio

1. Insert a tape into the deck.
2. Press **POWER/CD/RADIO/TAPE** until RADIO mode is selected.
3. Press **BAND** to access the desired radio band.
4. Press **TRACK/TUNE** $\frac{1}{2}$ or $\frac{1}{2}$ to tune to the station to be recorded.

5. Press **RECORD** and **PLAY** together to begin recording.
6. Press **PAUSE** or **STOP** to pause or stop recording respectively.

From CD

1. Insert a tape into the deck.
2. Press **POWER/CD/RADIO/TAPE** until CD mode is selected.
3. Insert the disc to be recorded.
4. Select the track or program to be recorded.
5. Press **RECORD** and **PLAY** together to begin recording.
6. Play the track or program to be recorded.
7. Press **PAUSE** or **STOP** to pause or stop recording respectively.

Tip:

For better recording quality, use normal bias tape (Type I) only.

Troubleshooting tips

EN

Problem	Solution
System doesn't turn on	<ul style="list-style-type: none">• Unplug the unit for a moment, and then plug it back in.• Check the outlet by plugging in another device
No sound	<ul style="list-style-type: none">• Adjust volume setting.• Make sure you've selected the correct function
Poor radio reception	<ul style="list-style-type: none">• Adjust the antenna for better reception• Try turning off electrical appliances near the unit, such as hair dryers, vacuum cleaners, or fluorescent lights
CD doesn't play	<ul style="list-style-type: none">• Make sure you've put a CD in the tray• Make sure the CD's label is facing up• Try another CD• Make sure that Pause mode is not activated• Make sure CD function is selected
CD sound skips	<ul style="list-style-type: none">• Clean the CD (as explained in "More Information")• Check CD for warping, scratches, or other damage• Check for vibration or shock that may affect the unit; move the set if necessary.
Remote control doesn't work (RCD125 / TM9139U / TM9238U only)	<ul style="list-style-type: none">• Make sure batteries are properly installed• Replace all batteries as they may be dead• Clear the obstacles or shorten the distance between the remote and the unit

Maintenance

EN

Cleaning the exterior

- Disconnect the system from AC power before cleaning the exterior of the unit with a soft dust cloth
- Clean the exterior with a soft clean cloth or slightly moistened chamois leather. DO NOT use solvents as it may cause damage to the unit.

Handling CDs

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label.
- CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs
- Make sure CDs are stored in their original case after use. Keep them away from damp, humid or abnormally heated places.

Cleaning CDs

- Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface.

CD Lens Care

- When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

Cassettes

- To protect your recordings from accidental erasure on one or both sides of your cassette, snap out the tab at the top of the cassette. If you decide later to record on the tape, seal the hole with a piece of adhesive tape. (Refer to diagram on the right)
- Quit Slacking - A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.



More Information

Safety Precaution

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- The apparatus shall not be exposed to dripping and splashing.

Headset Safety

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
- If you experience ringing in your ears, reduce volume or discontinue use.
- You should use with extreme caution or temporarily discontinue use in potentially hazardous situations.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
 - if mixed with a different battery type,
 - if inserted incorrectly,
 - if all batteries are not replaced at the same time,
 - if disposed of in fire, or
 - if an attempt is made to charge a battery not intended to be recharged.

Notes on CD-R/RW

This unit is compatible with CD-RW/ CD-R discs for playback.

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.

EN

Limited Warranty (For U.S.)

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson multimedia Inc.

Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79927

- Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limited Warranty (For U.S.)

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Limited Warranty (For Canada)

EN

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.
6200 Edwards Blvd.,
Mississauga, Ontario,
L5T 2V7
Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson multimedia Inc.

P.O. Box 0944

Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE



IMPORTADOR

Comercializadora Thomson de México, S.A. de C.V.
Miguel de Cervantes Saavedra 57
Col. Ampliación Granada
C.P. 11529 Mexico D.F.
Telefono: (55)25 81 53 20
RFC: CTM-980723-KS5

0151

Exporter
Thomson multimedia Inc.
P.O. Box 1976
Indianapolis, IN 46206 -1976
© 2002 Thomson multimedia Inc.
Trademark(s) ® Registered
Marca(s) ® Registrada(s)
Marque(s) ® Déposée(s)
55285560 (EN/F/E)

www.rca.com
www.rca.com/LatinAmerica
Made In China / Fabricado en China